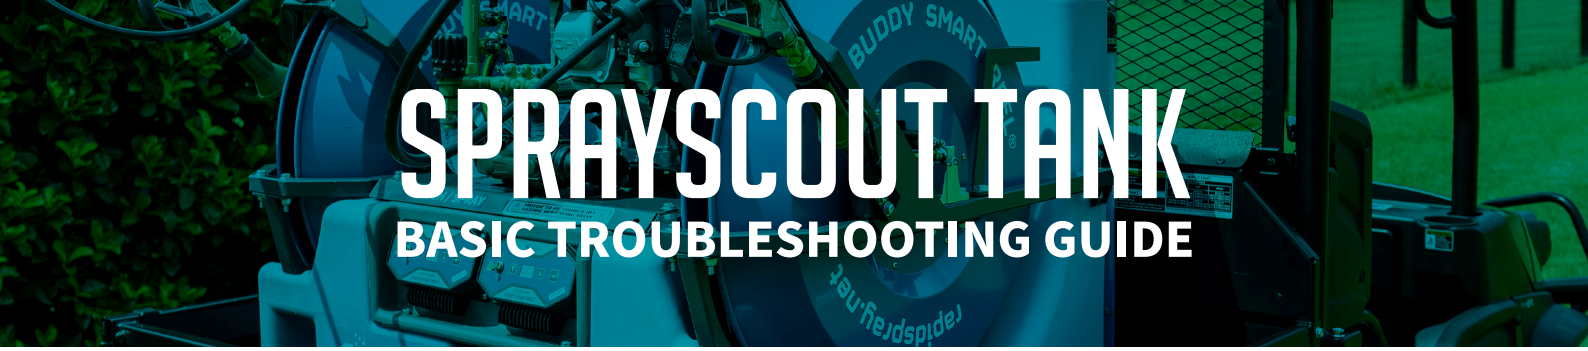

SPRAYSCOUT TANK

BASIC TROUBLESHOOTING GUIDE

SCOUT PULLS WATER FROM THE FLUSH TANK INSTEAD OF THE MAIN TANK

3 Possible Causes

Air lock in the sytem: This will need to be released

Open one of the ball valves taps on the mainfold that not hooked up to a reel

Once the tap is open, run the pump. It should get rid of the air in the system.

It should then pick up liquid out of the tank which will come out of the open tap. At this point close the tap or shut down the pump.

There is a red lever at the front of the unit.

Lever needs to be pointing at the main tank to pull from the main tank.

This may have caused an airlock in the system. Run through the air lock.

The unit maybe sucking air from somewhere.

Hose clamps may not tightly installed.

Check for loose fittings at the pump end or at the suction filter

END

Rapid Spray